


PARTS FOR ROLL-A-MATIC JRS.

PARTS LIST FOR MARK 10

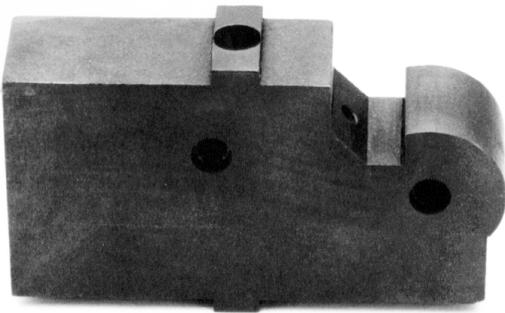

MAIN BODY RJ1



PAWL
(LEFT HAND
ROTATION)
RJ 5L



PAWL
RJ 5R



SPECIAL
ARBOR SCREW RJ 7



SHOULDER
SCREW
(FOR PAWL)
RJ 6



ARBOR
SCREW
RJ 8



RETURN SPRING
ANCHOR PIN RJ 9




PIN (LOCATOR) RJ 10



RETURN SPRING RJ 11

PARTS LIST FOR MARK 12

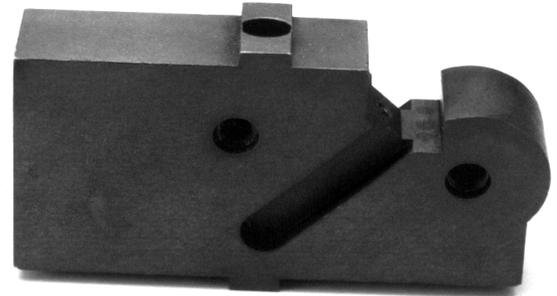

MAIN BODY RJ 2



ARBOR SCREW
RJ 18



SHOULDER SCREW
(FOR PAWL)
RJ 19




RETURN SPRING RJ 11



PAWL RJ 5R

PARTS LIST FOR MARK 14

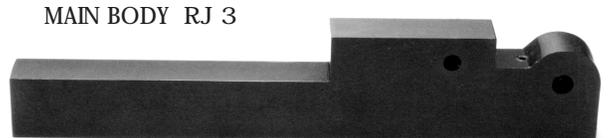

MAIN BODY RJ 3



ARBOR SCREW
RJ 8



SHOULDER SCREW
RJ 6



RETURN SPRING
RJ 11



PAWL
RJ 5R

PARTS LIST FOR MARK 15

Set screw (not shown) - use standard 10-32
(3/4" long)



MAIN
BODY
RJ 13



ARBOR
SCREW RJ 16



PAWL
RJ 14



SHOULDER SCREW
(FOR PAWL) RJ 15



RETURN SPRING RJ 11



RJ 5L

SPECIAL PAWL

For clockwise rotation, a left hand pawl makes the entire assembly reversible. Thus the Roll-A-Matic Jr. is completely universal for front and rear slides, clockwise or counter-clockwise rotation. (This special pawl supplied as extra equipment).

PARTS LIST FOR MARK 20

MAIN BODY RJ 4



ARBOR SCREW
RJ 26



SHOULDER
SCREW RJ 27



RETURN SPRING
RJ 28



PAWL
RJ 29

Use our simple C409 sheet to order what you need.